

USER MANUAL

POWERplus Toucan Solar MP4 player

Congratulations with your new POWERplus® Toucan Solar MP4 player.
With this quality product from POWERplus® you can enjoy a fantastic multi media experience.

 
With the integrated solar panel you can charge the Toucan everywhere in day- or artificial light.
You can also charge the Toucan with your USB-port of your computer or with the included AC 220V charger.

In this user manual you can explore the Toucan step by step.
We wish you lots of pleasure with your new Toucan.

Contents:

Page 2	Operating buttons
Page 3	First time use of your Toucan
Page 4	Music-function
Page 5	Video-function
Page 6	Radio-function
Page 7	Photo-function / Text function
Page 8	Recorder-function / Navigation function
Page 9	Game-function / Settings

Operating buttons

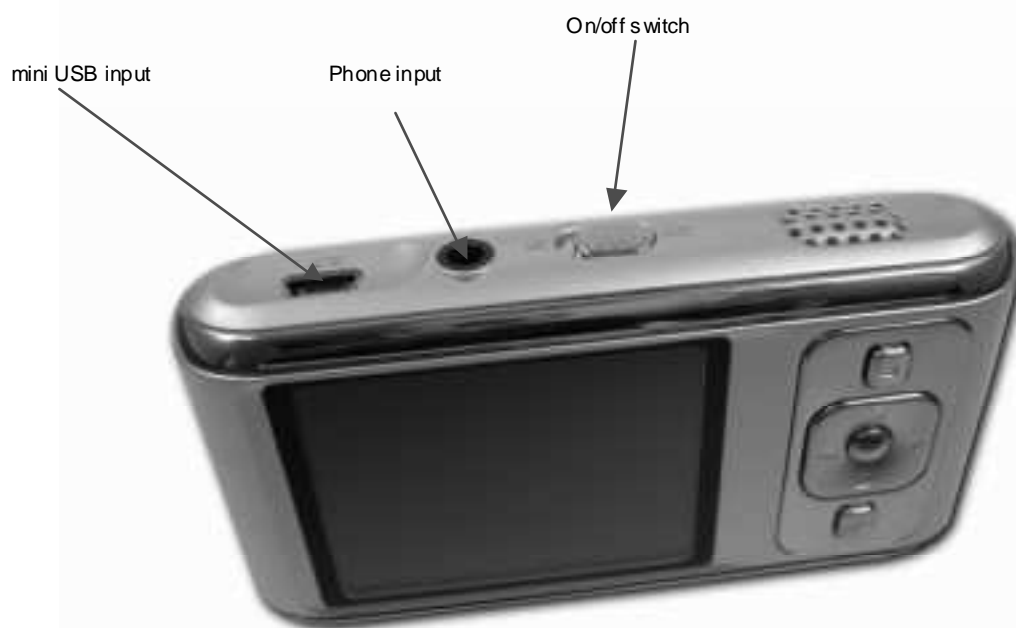

First time use of your Toucan

Before use

The Toucan Solar MP4 player can be charged with the integrated solar panel. Put the Toucan with the solar panel above in sunlight or artificial light and the built-in rechargeable Lithium battery will be charged. The green indication LED will be on during charging.

The battery can also be charged with the included 220V AC charger.


With the included USB-cable you can download music, video and photofiles in the supported formats¹ from your computer. Turn on the Toucan and connect the Toucan with the included USB-cable with your computer. The computer recognizes the Toucan as an external disk and through the navigating function you can copy files to and from your MP4 player. When you are using Windows 98 as operating system it could be possible that after connecting the computer does not recognize the Toucan automatically. You can use driver which is available on the CD-ROM which is included. With the function 'New Hardware' from your Windows 98 operating system you can search for new hardware (the by USB connected Toucan). You can then select the driver on the CD-ROM to install.

After you have downloaded supported files on your Toucan, you can watch or listen these files on your MP4 player.

Using the Toucan

1. Switch the on/off switch at the top of the Toucan to the 'on' position.
Push the 'play' button for about 3 seconds and the display will turn on. After the short start up display the following display will appear.


|

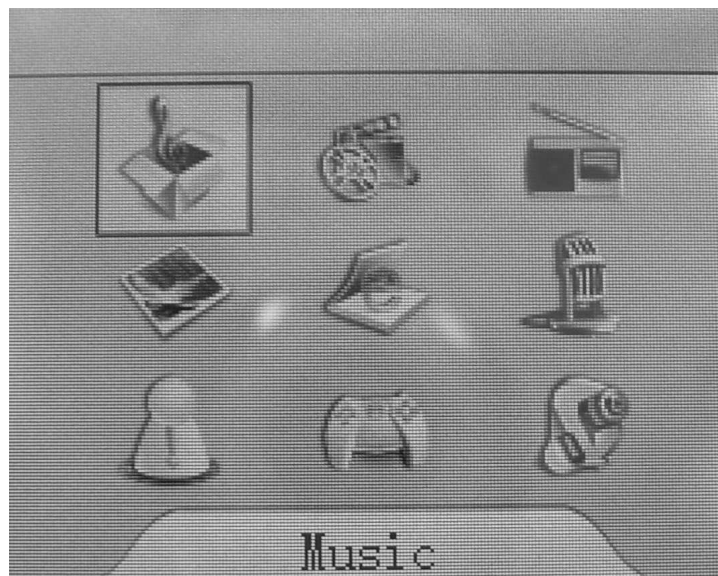 


This is the main menu of your MP4-player. With the left and right button you can skip through the 9 functions you can choose. With the enter button you can select the function.

¹ The supported formats are mentioned in the music, video and photo chapters
User Manual POWERplus® Toucan Solar MP4 player

 
You can choose the following functions

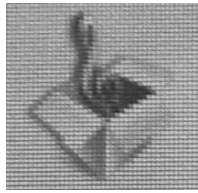


Music

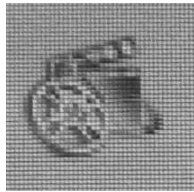 


Video

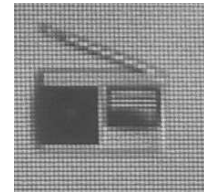 


FM radio

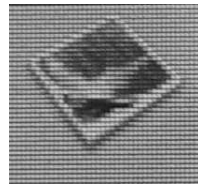 


Photo

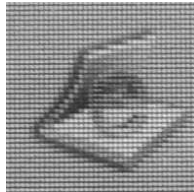 


Text

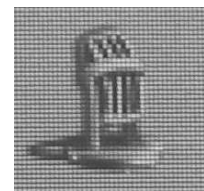 


Recorder

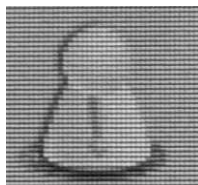 

Navigation

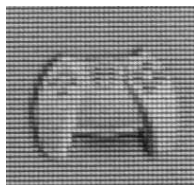 

Game

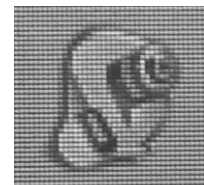 


Settings

1. Music

The Toucan support the following music file formats:
MP1, MP2, MP3, WMA, ASF, WAS, OGG

 By choosing this option the Music function of your Toucan will open. You will see a similar display as below:

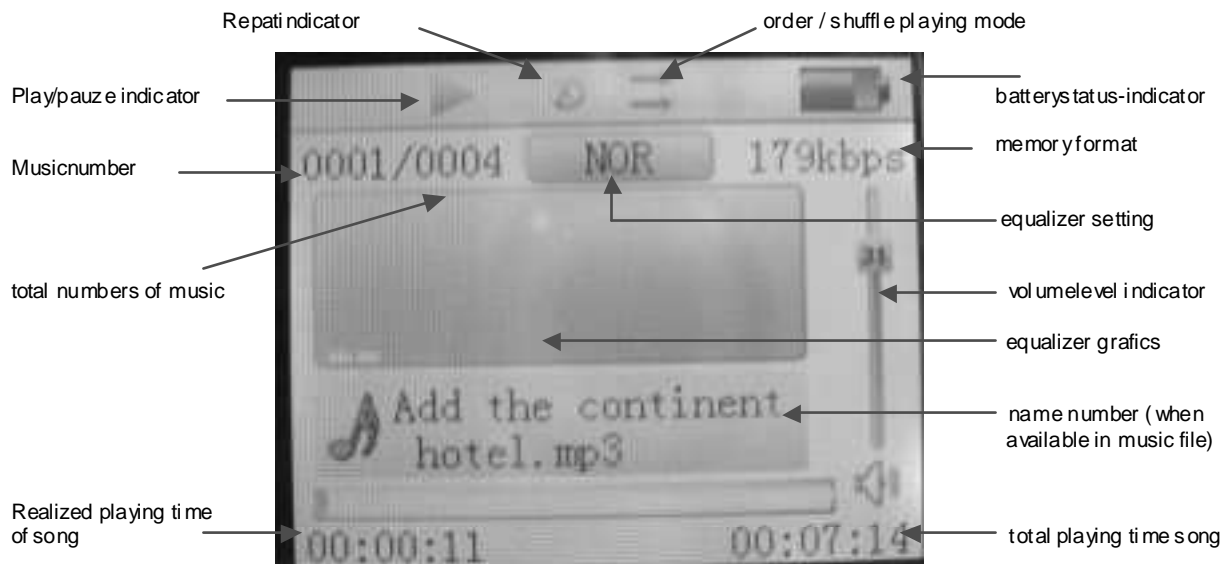

Functions of buttons at music menu / video menu



With this button you can repeat a part of the file. Push one time to start the selection (display shows A) and press second time to end the selection (display shows B). The selection will continued be repeated. Press again to delete the selection and the file will continue playing.

Press shortly: list of files
Press long: return to main menu Toucan

Music/video file back and forward

Volume higher/lower

Pauze / Play

2. Video

The Toucan supports the following video file formats:
AVI, RM, MPG, VOB, DAT, RMVB



 
Select the video image.




Select inside memory (internal memory) or mini SD memory (when).



Kies de map waar u uw video's hebt opgeslagen (bijv. movies)

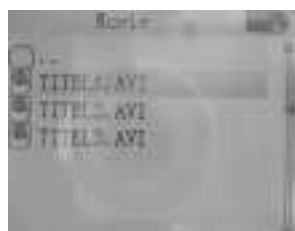

Kies de titel die u wenst af te spelen

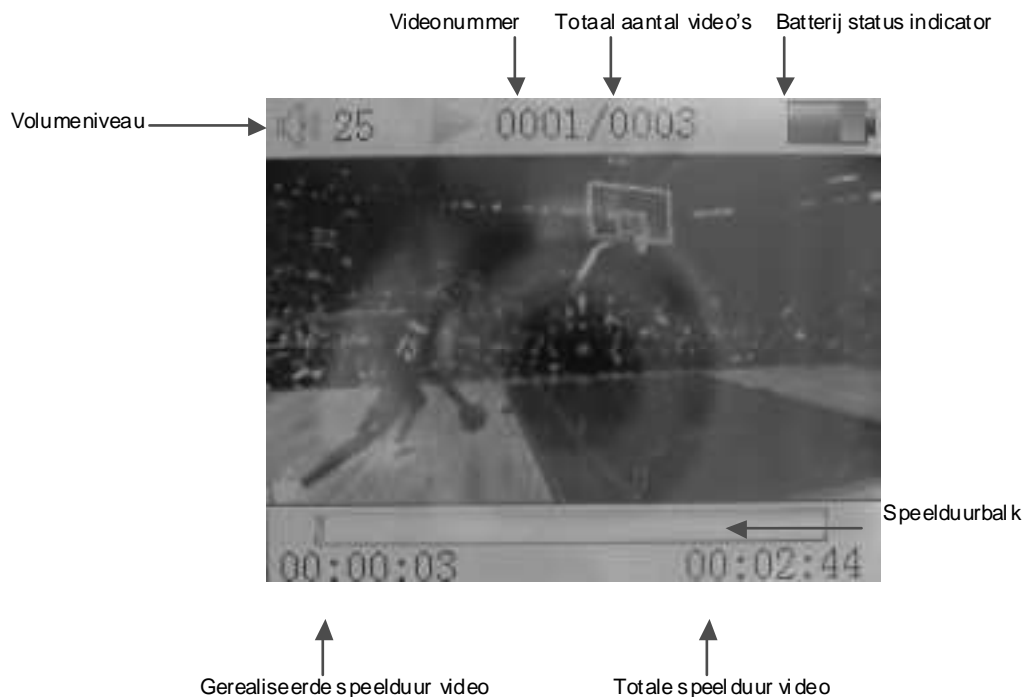 

Na circa vijf seconden verwijderd de informatiedisplay en kunt u genieten van een volledig scherm. Om terug te keren naar het informatiescherm, drukt u op de pauze/play button, zodat de video op pauze komt te staan. Door nogmaals op deze button te drukken start de video weer op het punt waarop deze op pauze is gekomen en verwijderd de informatiedisplay weer na circa 5 seconden.

 
Het volume kunt u aanpassen met de volumetoetsen (bovenste = harder, onderste = zachter).

Door de kies/enter toets ingedrukt te houden kunt u weer in het hoofdmenu terug komen.

3. FM Radio



Kies het FM radio icoontje in het hoofdmenu

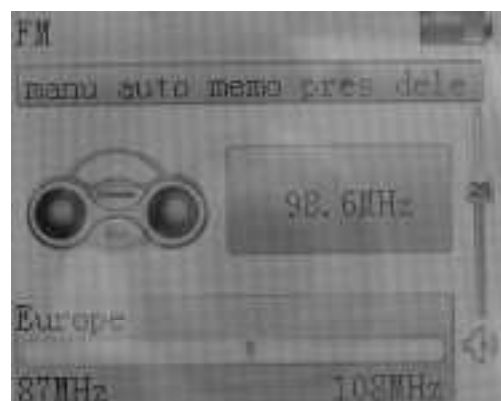

U beschikt nu over de FM radio functie

U kunt de volgende opties kiezen:

Manual	handmatig zenders zoeken
Auto	automatisch zenders zoeken
Memo	zenders vastleggen
Preset	schakelen tussen de vooraf vastgelegde zenders
Delet	vastgelegde zenders verwijderen

4. Foto

De Toucan ondersteund grafische bestanden in JPG-formaat



 
Kies het foto icoontje in het hoofdmenu



Kies voor het interne geheugen of de mini SD-kaart (indien geplaatst in het SD-slot).



Kies de map waar u uw foto's hebt opgeslagen (bijv. photo)

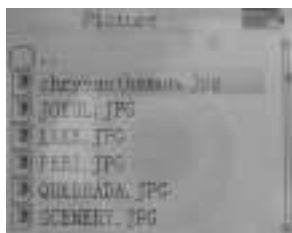

Kies het bestand dat u wilt bekijken.

Door de kies/enter toets ingedrukt te houden kunt u weer in het hoofdmenu terug komen.

5. Text

De Toucan ondersteund tekstbestanden in TXT-formaat.



Kies het tekst icoontje in het hoofdmenu



Kies voor het interne geheugen of de mini SD-kaart (indien geplaatst in het SD-slot).



Kies de map waar u uw teksten hebt opgeslagen (bijv. e-book)

Kies vervolgens het bestand dat u wilt bekijken.

6. Recorder



Kies het recorder icoontje in het hoofdmenu



Kies de play/speel button om het opnemen te starten.

7. Verkenner



Kies het verkenner icoontje in het hoofdmenu



Kies voor het interne geheugen of de mini SD-kaart (indien geplaatst in het SD-slot).

 


Vervolgens kunt u de mappen kiezen die u wilt verkennen en kunt u bestanden zoeken

8. Spelletje



Kies het spel-icoontje in het hoofdmenu

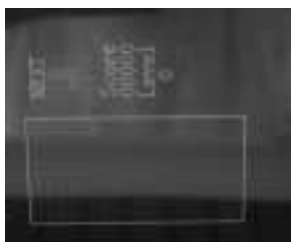


Vervolgens kunt u met de Toucan het spelletje Tetris spelen

9. Instellingen



 Kies het icoontje instellingen in het hoofdmenu

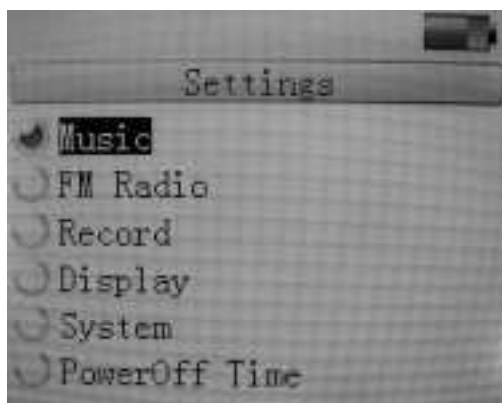

Het instellingen menu kent de volgens opties:

Muziek

Herhalingsfunctie

Afspeelmogelijkheden

Equalizerinstelling

Eigen instelling equalizer

U kunt diverse herhalingsoptie kiezen

Hierbij kunt u op volgorde van bestanden kiezen of door elkaar

U kunt kiezen voor de volgende instellingen

Normaal, 3D, Rock, Pop, Classic, Bass, Jazz, eigen instelling

FM Radio

U kunt hierbij kiezen uit Stereo aan/uit en de FM regio selecteren; hierbij heeft u de keuze uit China, Europa, Japan en USA.

Recorder

<i>Opnamekwaliteit</i>	Keuze uit hoge kwaliteit en normale kwaliteit
<i>Opnamevolume</i>	Keuze uit 5 volumeniveau's

Display

<i>Tijd achtergrondverlichting</i>	Keuze uit 5, 10, 15, 20, 30 seconden en altijd aan
<i>Sterkte achtergrondverlichting</i>	Keuze uit 5 verlichtingsniveau's
<i>Achtergrondverlichting mode</i>	Keuze uit normaal en energiebesparende stand

System

<i>About</i>	Informatie over het systeem
<i>Upgrade</i>	Deze functie dient alleen gebruikt te worden door de serviceafdeling van de fabrikant voor toekomstige upgrades t.b.v. service en onderhoud
<i>Default set</i>	Alle instelling terug naar fabrieksinstellingen

Power off tijd	Keuze uit uit, 10, 15, 30, 60 en 120 minuten
-----------------------	--

Talen	Keuze uit diverse talen. Nederlands is helaas niet beschikbaar.
--------------	---